


## CLUTCH ADJUSTMENT -

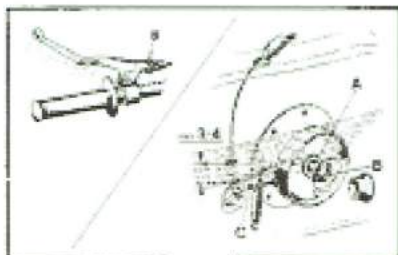

Adjust clutch lever freeplay by cable adjuster "B" so as to provide 6-8mm of free lever movement.

Periodically, remove the plastic screws on the clutch cover and check for proper clutch release adjustment. To adjust, follow this sequence.

1. Completely loosen clutch cable at handlebar.
2. Move lever "C" upward until contact with clutch throwout bearing is felt.
3. If lever "C" moves upward more than 3-4mm, adjustment is required.
4. Loosen small screw "B" and turn screw "A" in 1/4 turn. Again repeat Step 2. Continue to turn screw "A" until proper movement of lever "C" is attained.
5. Snug down screw "B". Don't overtighten!
6. Replace plastic screws. Caution - these screws crossthread very easily. Be very careful when installing.
7. Readjust clutch cable.

Special Note: The new "trick riding" style requires much use of the clutch. We have done quite a bit of experimentation with the SMM clutch and have arrived at some suggestion which results in a much reduced pull effort and improved feel. Please discuss this with your dealer.