

Gas Gas TXT Pro Motor Kick-start installation Instructions:

Kickstart Quadrant Gear Indexing:

If you have had the kick start assembly apart the quadrant gear must be indexed on the kick start shaft in the correct position on reassembly. Please follow the attached photos as reference. (see below). It HAS to be like the photos to work correctly.

Installation:

Put the long end of the spring back partially into the retaining hole so the kick starter gear sits just proud (above) the case, then wind the kick starter gear one complete revolution counter clock wise in order to pretension the spring, then push the whole spring assemble back into the seat from where it was initially removed.

When fitting the kick-start assembly into the engine the quadrant gear has to pass over the gasket surface as you wind up the spring, while the rest of the assembly is rotated behind the gasket surface.

When fully installed the outer circlip has to be flush with the gasket surface.

Don't forget to put the shim washer on the shaft before the cover goes on.

**Please look at Jim Snells Kickstart installation information
You Tube Video. LINK BELOW.**

<https://www.youtube.com/watch?v=h7disOibvEU&t=543s>

