

Fill the fork with ATF.

CAPACITY: 204.5–209.5 cc

(6.91–7.08 US oz, 7.20–7.37 Imp oz)

Pump the fork several times.

Compress the fork and measure the ATF level from the top of the tube after the level stabilizes.

SPECIFIED LEVEL: 145.0 mm (5.71 in)

Wipe ATF off the fork spring completely.

Install the fork spring, spring seat and spacer in the fork tube.



NOTE

- Note the spring direction; the small diameter end must face toward the bottom.

Loosely install the fork tube cap.

INSTALLATION

Install the front fork into the steering stem and fork bridge, and align the groove of the fork tube with the top of the fork bridge.

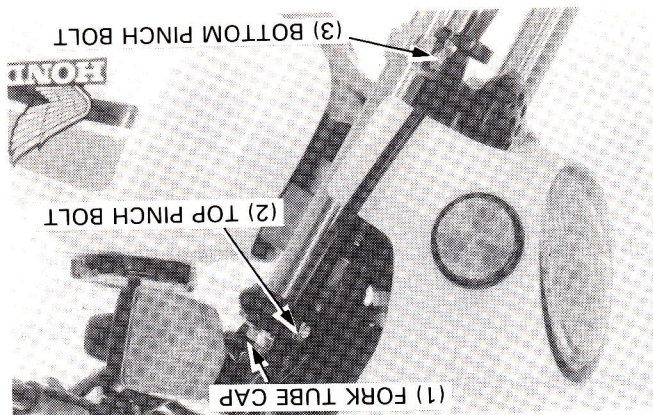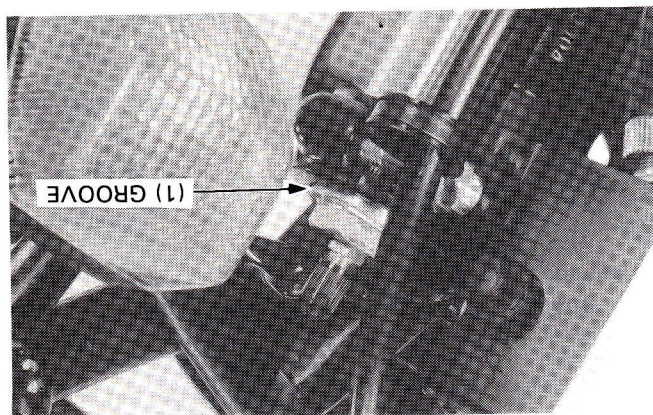

Tighten the fork top and bottom pinch bolts.

TORQUE:

TOP PINCH BOLT:

20–25 N·m (2.0–2.5 kg-m, 14–18 ft-lb)

BOTTOM PINCH BOLT:

30–40 N·m (3.0–4.0 kg-m, 22–29 ft-lb)

Tighten the fork tube cap.

TORQUE: 15–30 N·m (1.5–3.0 kg-m, 11–22 ft-lb)

