FORK OIL -

To drain fork oil, remove drain screw on lower rear of fork tube. To refill oil, remove top nut and add oil. Note - it may be necessary to loosen the top triple clamp bolt to allow easy removal of the top fork nut.

Oil Quantity - 210cc per leg (Marz.)
220cc per leg (Betor/SWM)
180cc per leg (32 mm Betor - 125 TLNW only)

Comment - The screws in the bottom of the hex on the fork caps retain a spring and ball check valve. However, these still allow the forks to pump up. About once a week, unscrew the valves to let any air escape to provide more constant fork performance.

LIGHTING -

Electrical power is available under the gas tank. Follow this guide if installing lights.

SCHEMA IMPIANTO ELETTRICO (240-320 TL/NW e TL/MW)

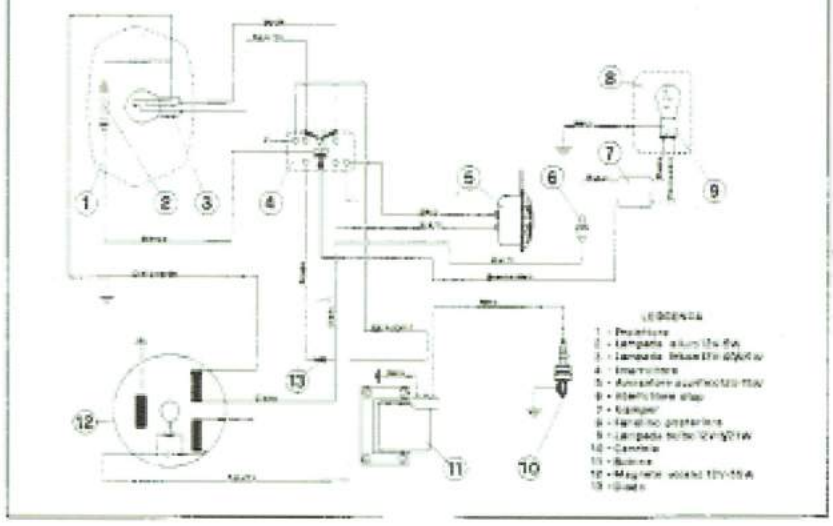

Verde = Green Nero = Black Giallo = Yellow
Bianco = White Azzurro = Blue Rosso = Red (or pink)