


Instructions modification Hot-start device Rev-3 4T

On the standard bike the hot start does not work so well. With this modification it makes the 4T much easier to start when it will not start normally:

1. Remove the carburettor manifold
2. Remove the Hot-start knob

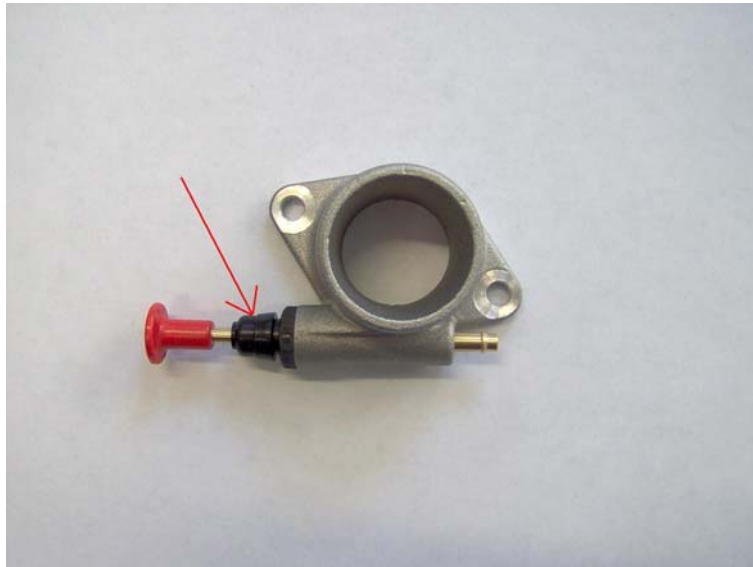

3. Widen the calibrated hole to Ø2mm



4. Deeply clean the part and assemble again

IMPORTANT:

Use the hot start when the bike will not start normally. If the bike has been on it's side or you have some problems to start use the hot start but with NO THROTTLE.